

---

# PROGRAMMING TOOL – STANDARD USER GUIDE

## Contents

Supported USB-CAN dongles.....	2
How to install the Programming Tool application.....	3
How to uninstall the application.....	4
Launch the installed application.....	6
Identify device.....	8
Setting up desired baud rate for a dongle .....	9
Setting Default Paths.....	10
Setting up 'Security' folder .....	12
Program an .s19 file into a selected controller .....	14
Program ALL.....	17
Creating a Vehicle Config file .....	18
Log CAN Bus traffic .....	20
Loading EEPROM Data from a controller into an XML File .....	22
Single XML.....	23
Multiple XML.....	26
Create Multi XML .....	27
Reading EEPROM Data from an ECU into a .txt File.....	29
Accessing controller's EEPROM single cell content.....	30
Sending CAN messages to a controller/monitoring CAN traffic.....	31
Advanced Settings .....	35
Get information about the Programming Tool.....	36
Appendix A: Change Log.....	38

### Supported USB-CAN dongles

- Kvaser
  - a. Leaf Light V2
  - b. Leaf Light V3
  - c. USB-CAN Pro
- PEAK PCAN-USB
- MasterVolt USB Adapter (Locked to 250Kbaud)



Kvaser Leaf Light v2




PCAN-USB

## How to install the Programming Tool application

Unzip “MTI ProgTool Installer.zip”. Locate and run “MTI Programming Tool Installer.exe” to initiate the Marlin CAN USB Programmer application installation. Follow the prompts during the process until it’s finished.


During installation, you have the option to install drivers for your desired CAN dongle. Both will need to be installed for the program to run.

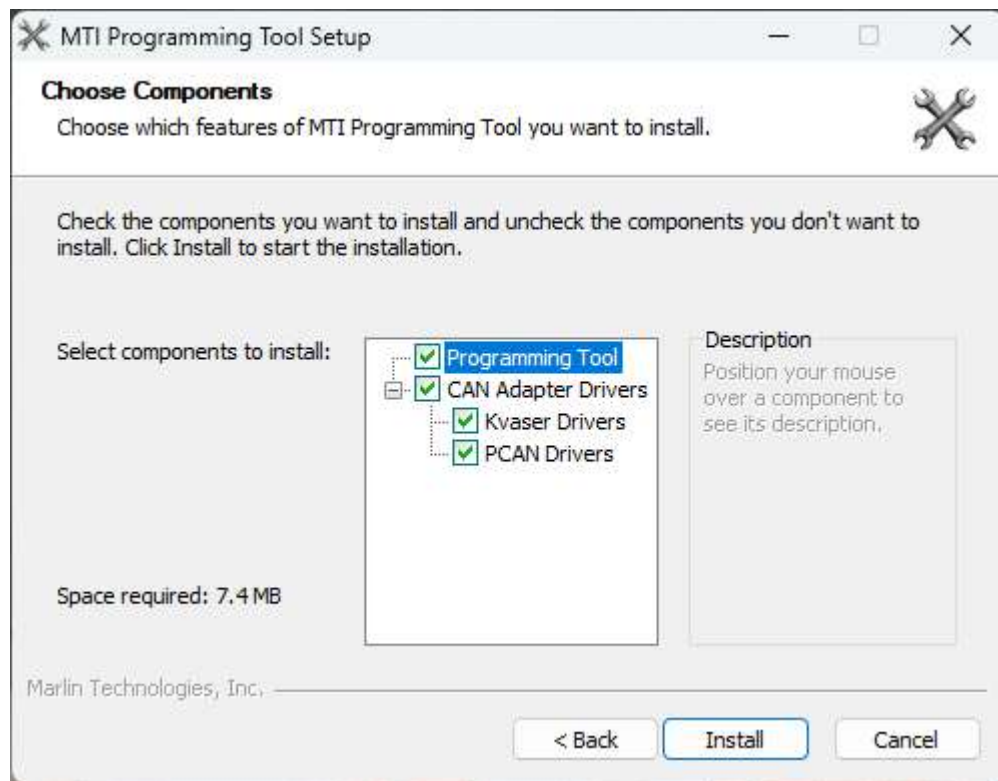

Menu for selecting which CAN Drivers to install

### How to uninstall the application

To uninstall the application, right click on the windows icon in the taskbar and navigate to "Installed apps".

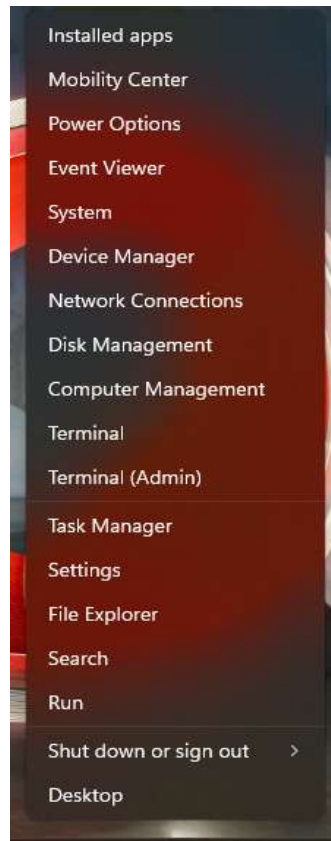


Menu showing "Installed apps"

Locate "MTI Programming Tool", click on the 3 dots to the side, and click on "Uninstall" to start the uninstall process.



Uninstalling the Programming Tool


Follow the prompts and wait for the process to complete. The shortcut should disappear from your workstation's Desktop.

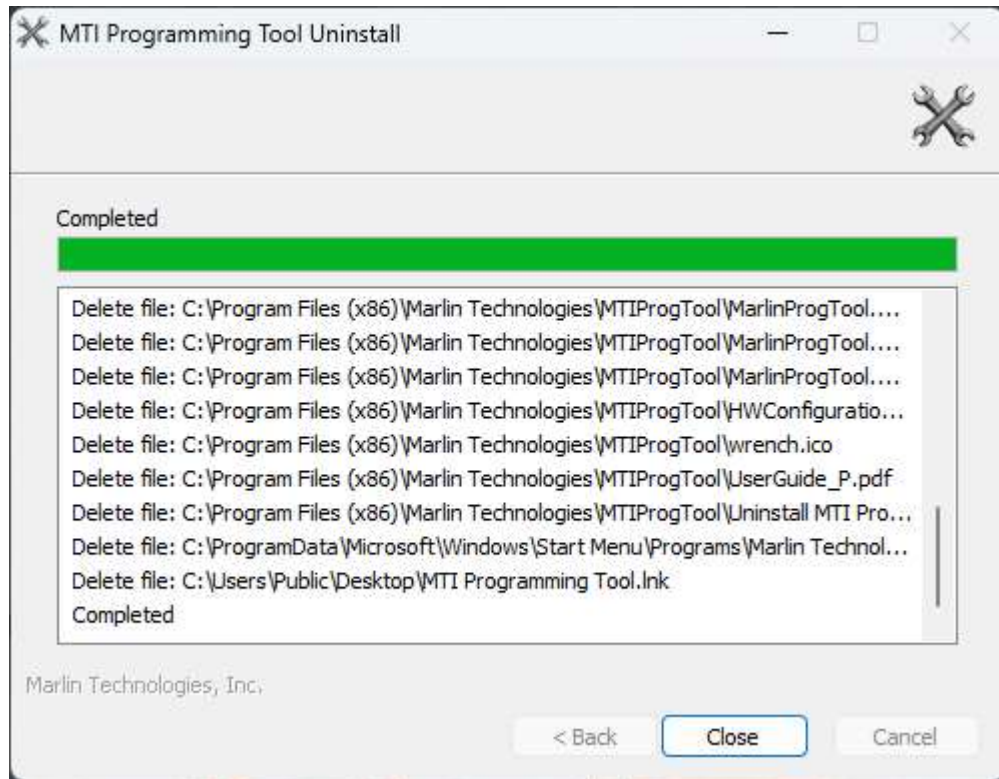

Uninstallation completion

### Launch the installed application


After successful installation, a shortcut called "MTI Programming Tool" will appear on the user's desktop. To launch the application, double click it.




Shortcut icon for Programming Tool

Once the program is launched, the application's main page will appear and an automatic search for compatible dongle(s) attached to the computer's USB port(s) will be performed.

More than one dongle can be connected to the user's PC workstation at the same time, however, only one of them can be active at a given time.

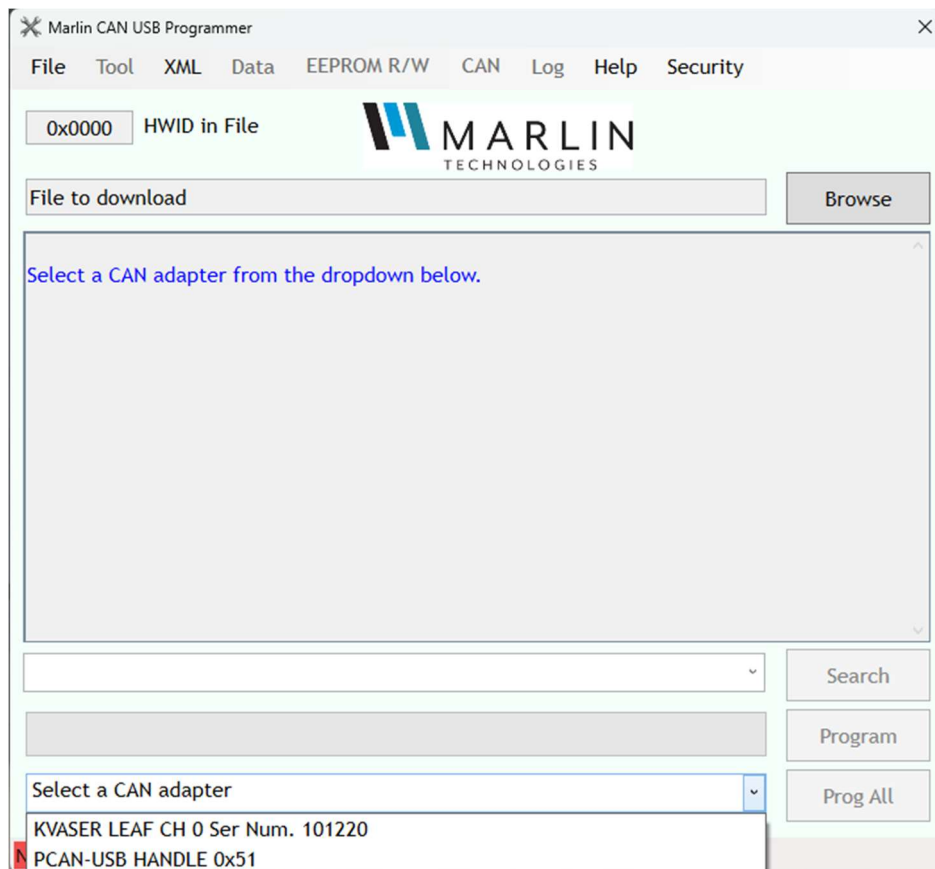

Multiple dongles connected

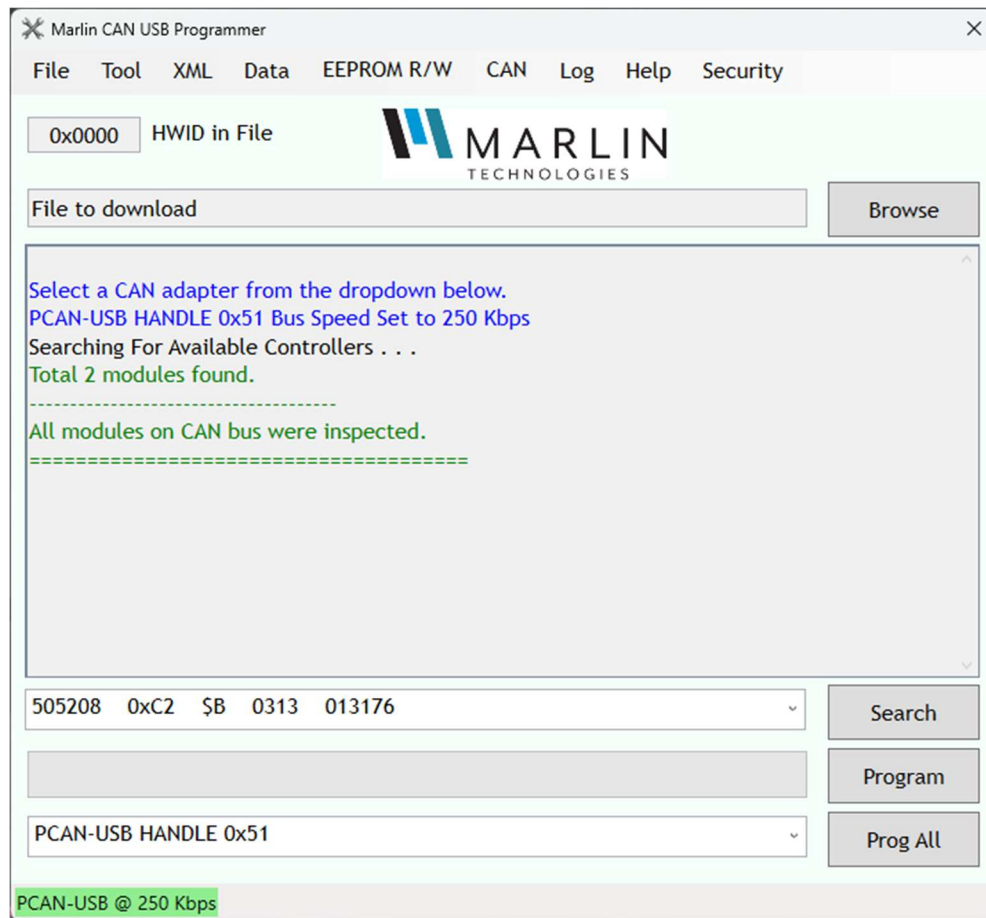


Selecting the 'PCAN-USB' dongle

Once a dongle is chosen, its name and the current baud rate will appear on the status strip at the bottom of the main window highlighted in green. A search for available on CAN bus controllers will start automatically. The user can then repeat the search by clicking on the "Search" button.

### Identify device


If the connected device supports the 0xFFB2 *Marlin Beacon Command* PGN, an “Identify” button will appear. Clicking this button will cause the selected CAN device to flash, useful if many of the same device are on the bus.

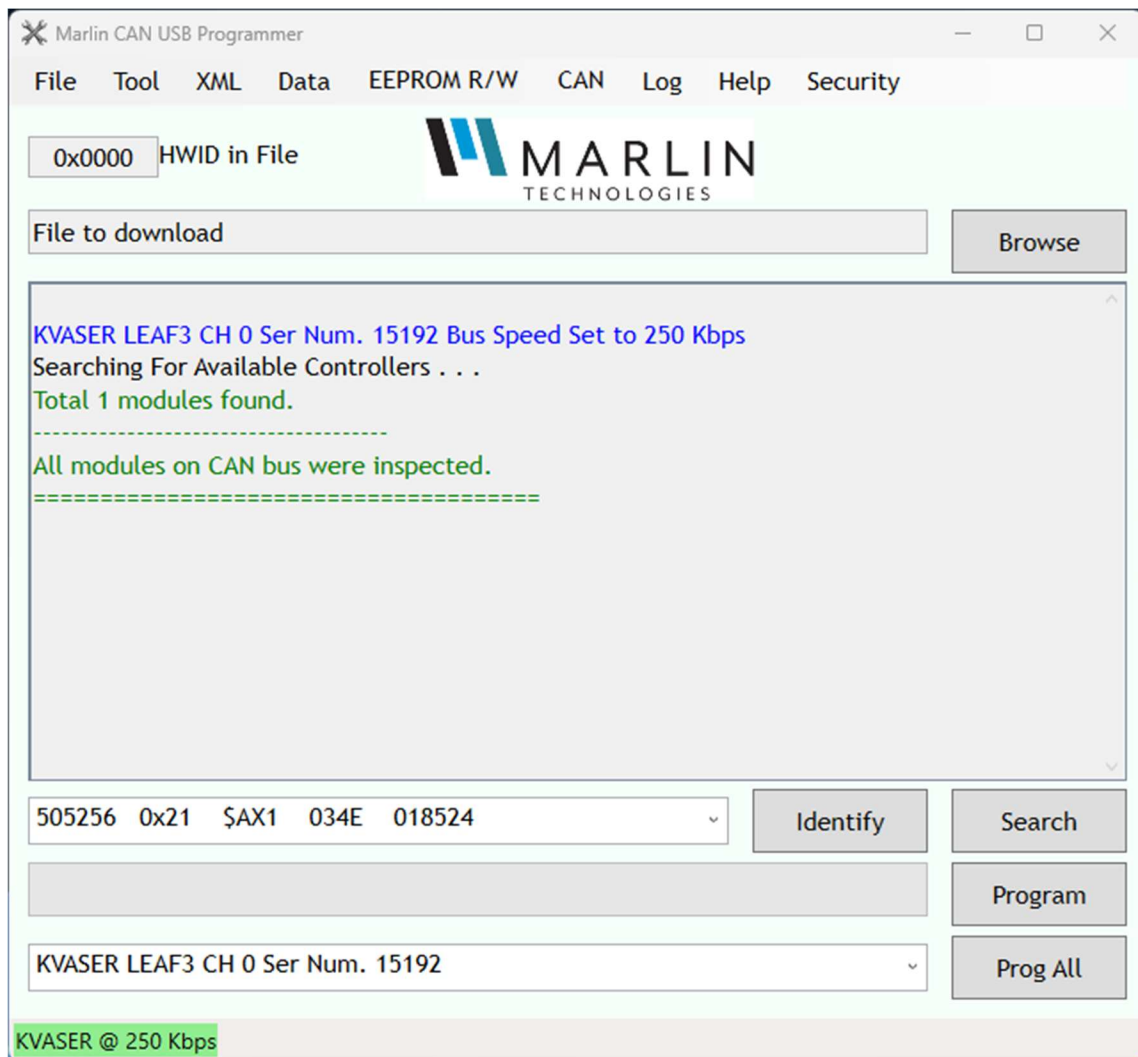

The Identify button on the main menu

### Setting up desired baud rate for a dongle


The first time you open the application, a default value of 250 kbit/s will be set. To change the speed, click on "Tool" -> "Baud Rate:" and pick any of four available rates: 125 kbit/s 250 kbit/s, 500 kbit/s or 1 Mbit/s. This selection will be remembered after the application is closed.

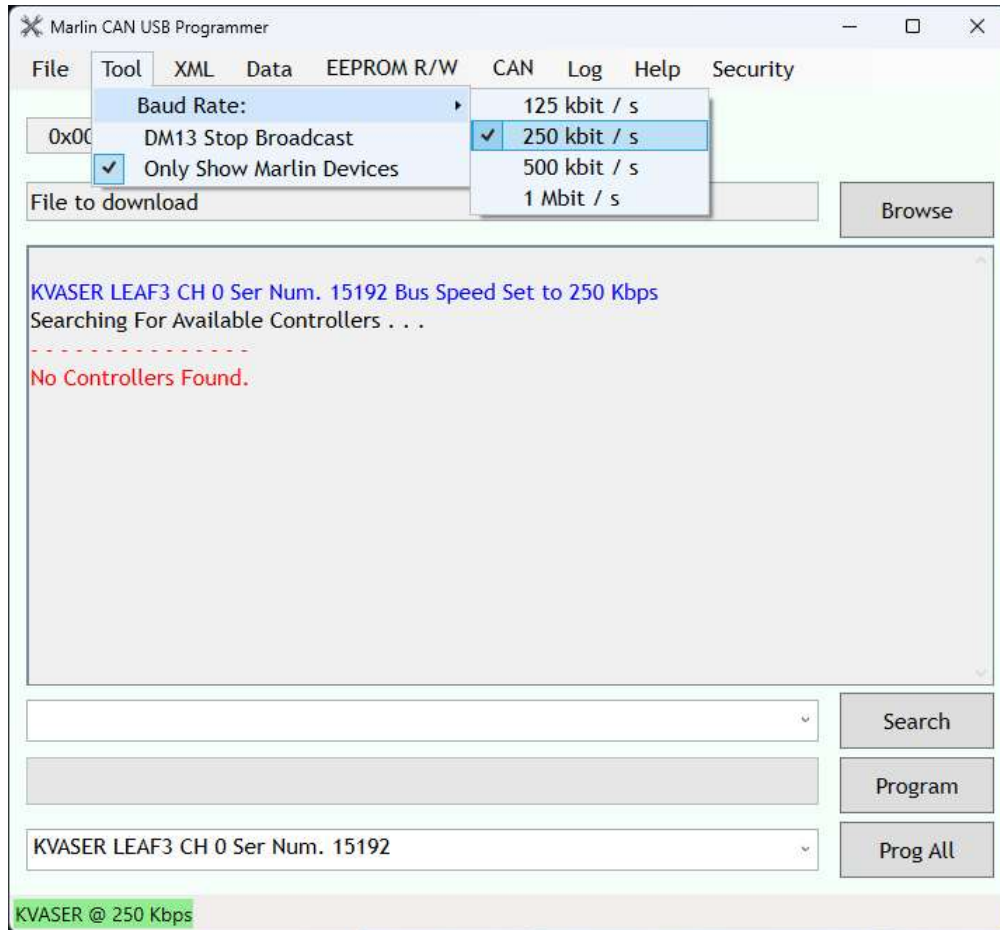

Selecting a baud rate

## Setting Default Paths


You can set default folders used when the application opens file or save dialogs for common tasks. From the main window, click File, then Set Default Paths.

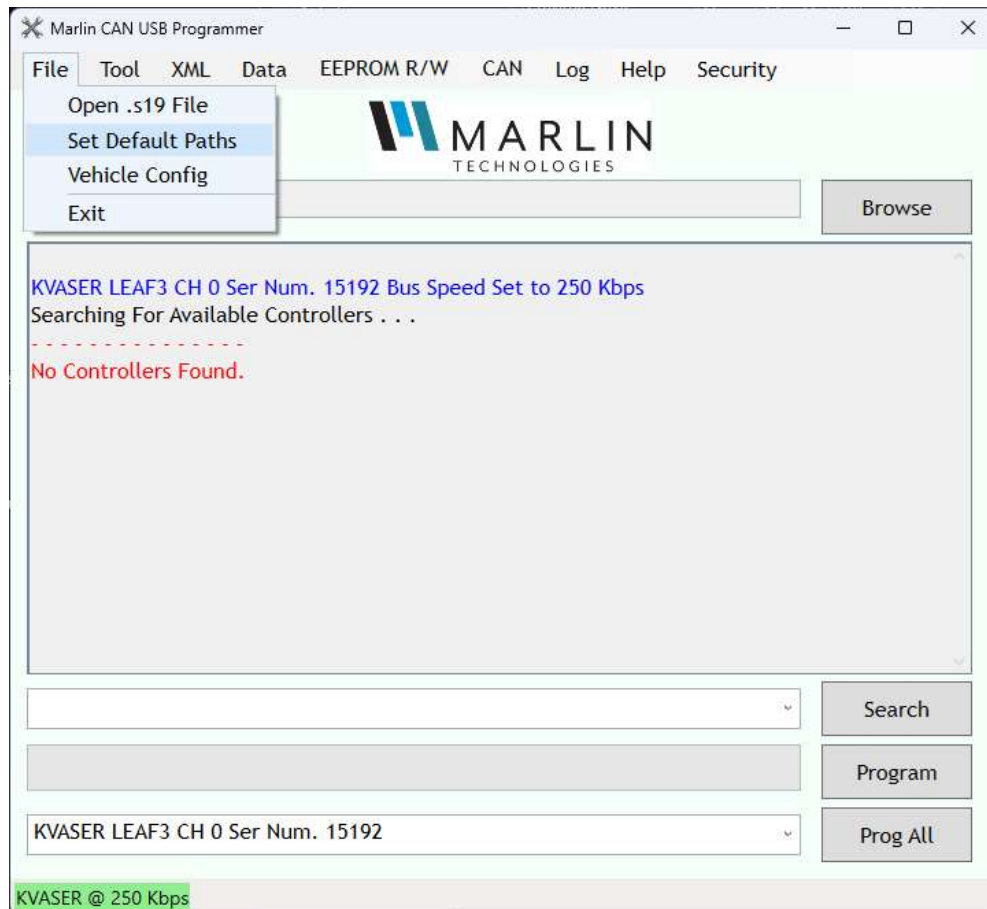


Location of "Set Default Paths"

The Set Default Paths window lists four locations: S19 default (.s19 programming files), XML default (XML EEPROM files), Multi XML default (Multiple EEPROM XML files), and Vehicle Config CSV default (CSV files used with Prog All).

Click the path for the desired path to choose a folder. Use Clear beside a row to remove that default. Click "Save" to store your choices in the application settings or "Cancel" to discard changes made in this session and restore the previous values.

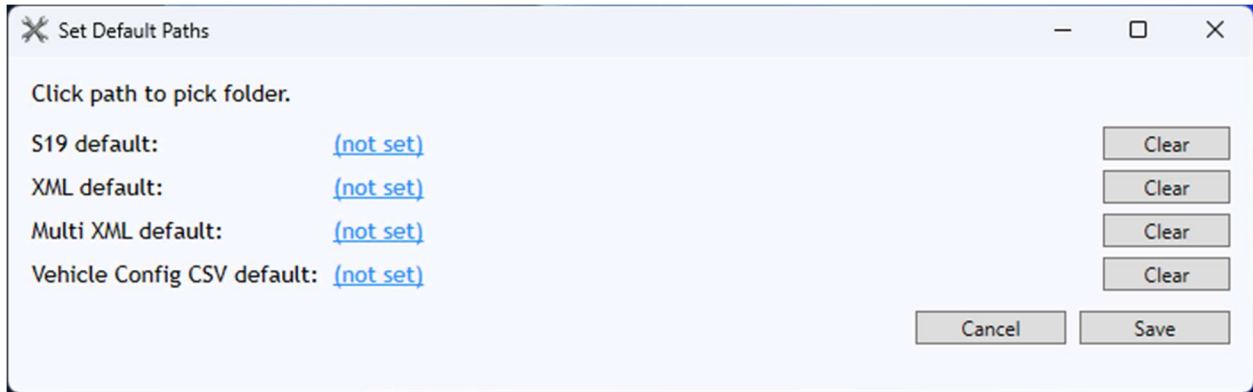

Opened "Default Paths" menu

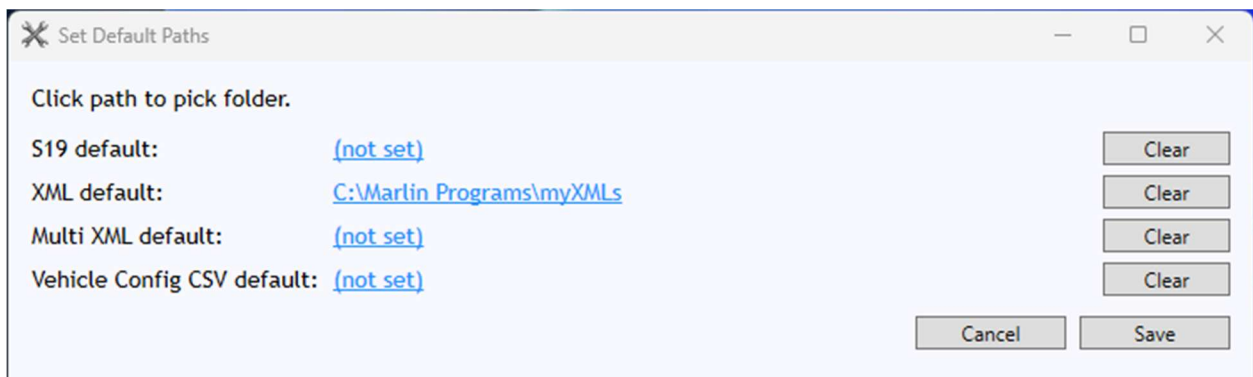


Example of a set path


## Setting up 'Security' folder

If you have a policy requiring the use of a fixed folder containing .s19 files, click on "Security" -> "File Directory" -> "Lock" to lock the programming tool to a specific folder:

To remove the folder lock, uninstall and reinstall the programming tool as outlined in the relevant section of this guide.

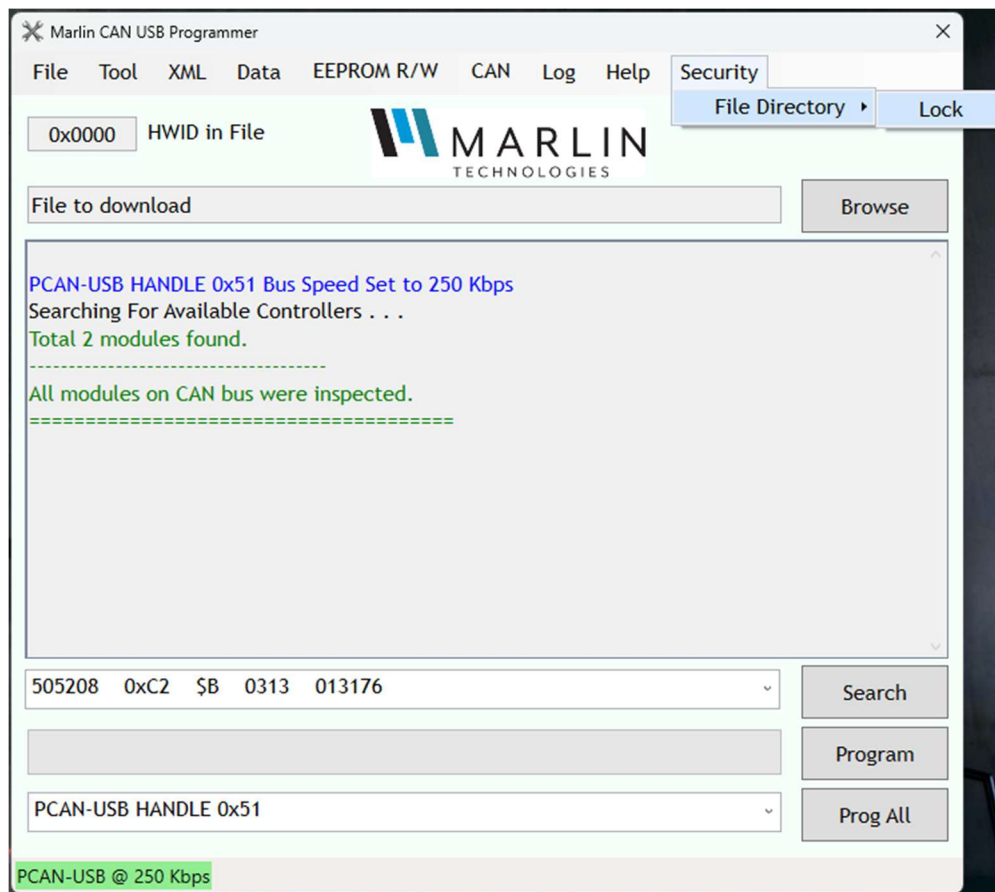

Locking the file directory

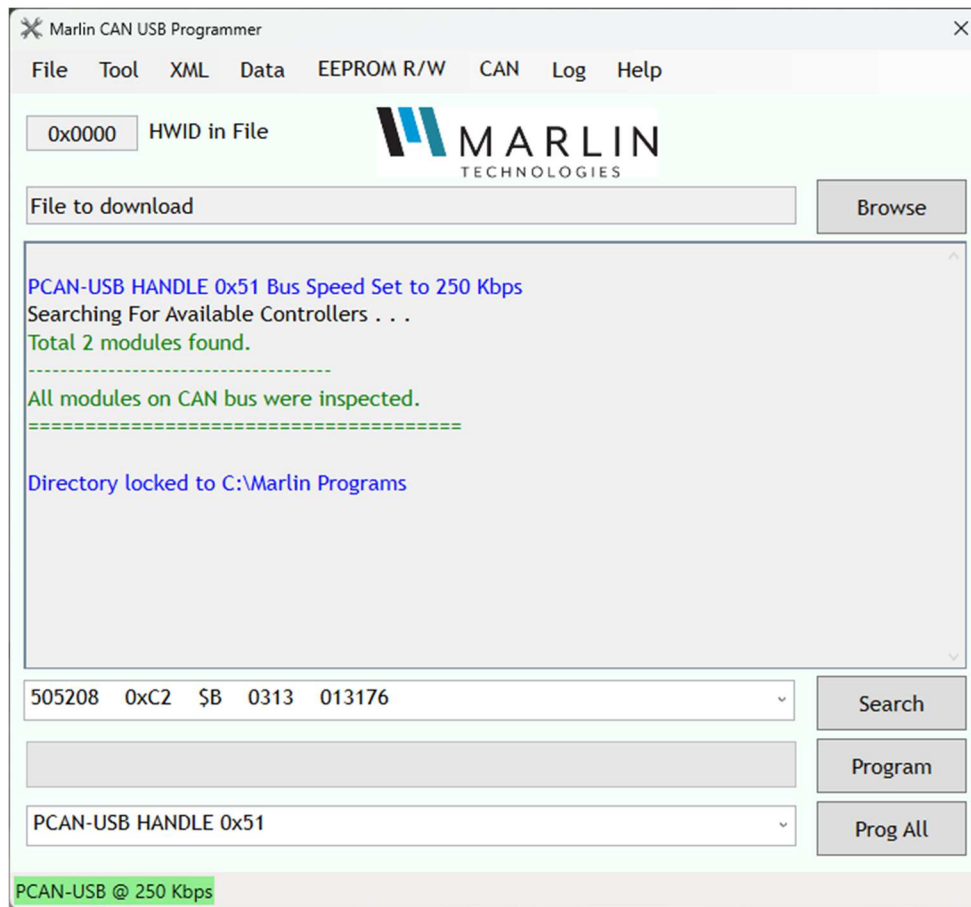


Confirmation of directory lock

*Note the "Security" tab has disappeared from the menu.*

### Program an .s19 file into a selected controller

Click on the "Browse" button or go to "File" -> "Open .s19 File" to choose an .s19 file saved on your PC's hard drive.

**Note: do not place your .s19 files into "C:\Program Files (x86)\Marlin Technologies\". The access to this location might be denied by the operating system.**

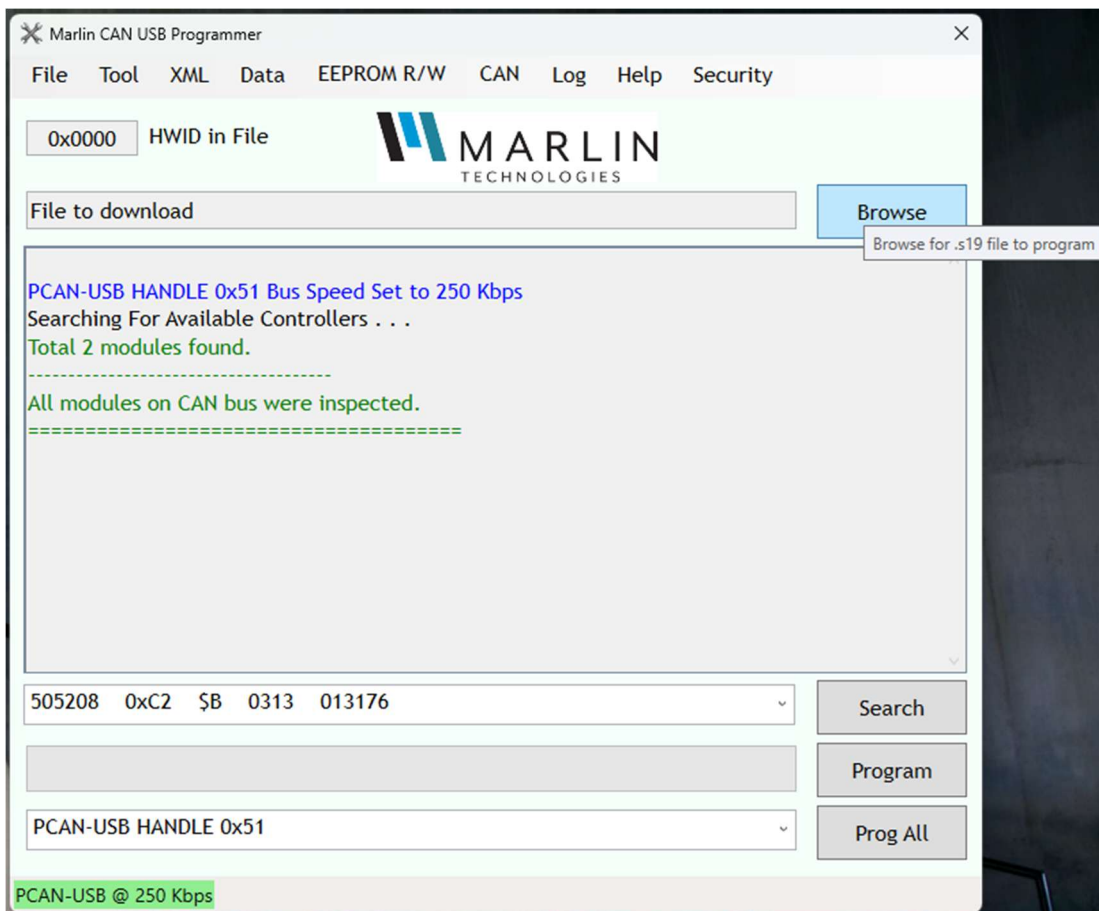


Button to browse for an .s19 file




.s19 file selected

Once an .s19 file is selected, the file path will be shown in the text box by the "Browse" button. You can now download a program to the selected controller by clicking on the "Program" button. During programming, the progress bar will advance and completion percentage will be shown, and all buttons are disabled to prevent programming disruption.

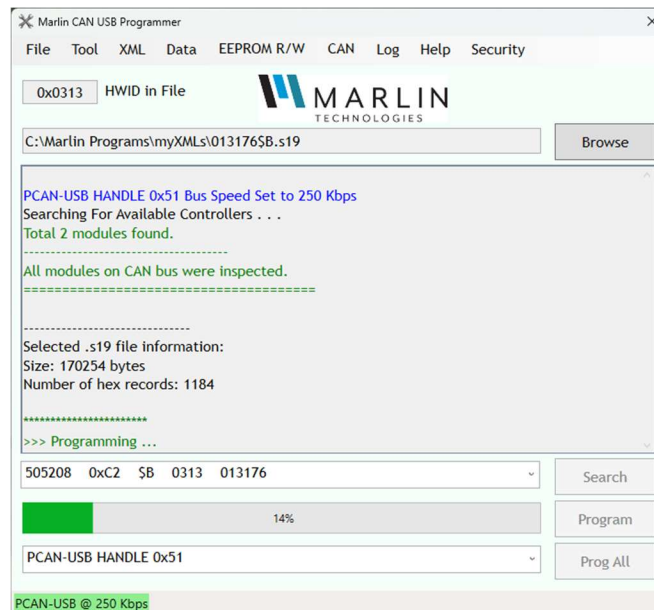


Device programming in progress

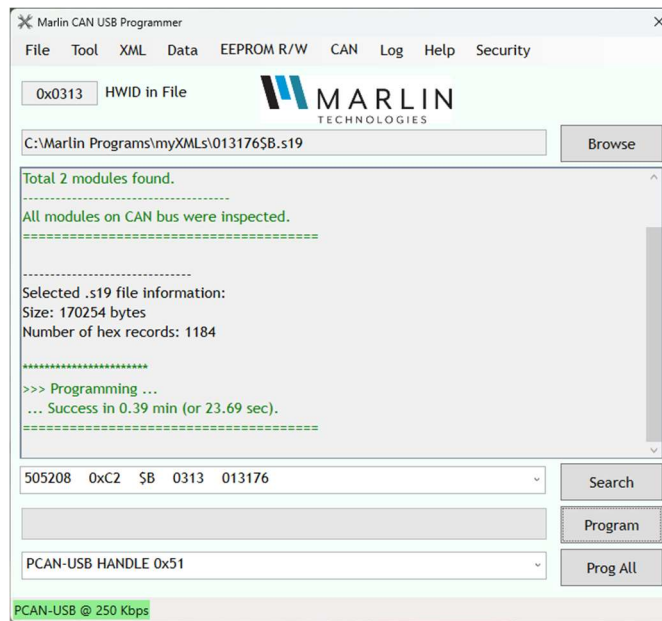

Device programming success

### Program ALL


It is possible to program all Marlin controllers on a CAN bus by clicking on "Prog All" button. The user will be prompted to choose a CSV file that contains a list of connected modules and links to their .s19 programming files.

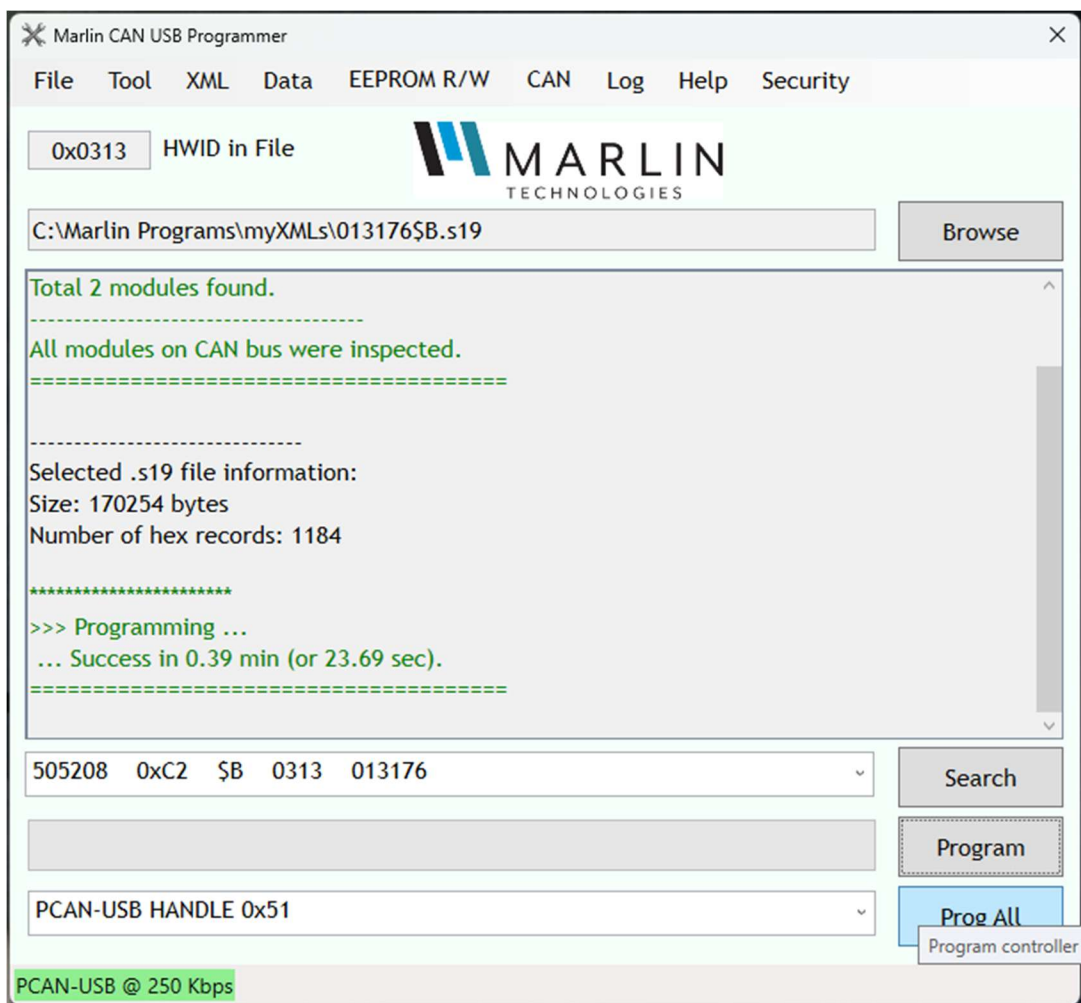


Button for programming all devices

### Creating a Vehicle Config file

To create a Vehicle Config file for use with the "Prog All" function, navigate to "File" -> "Vehicle Config".

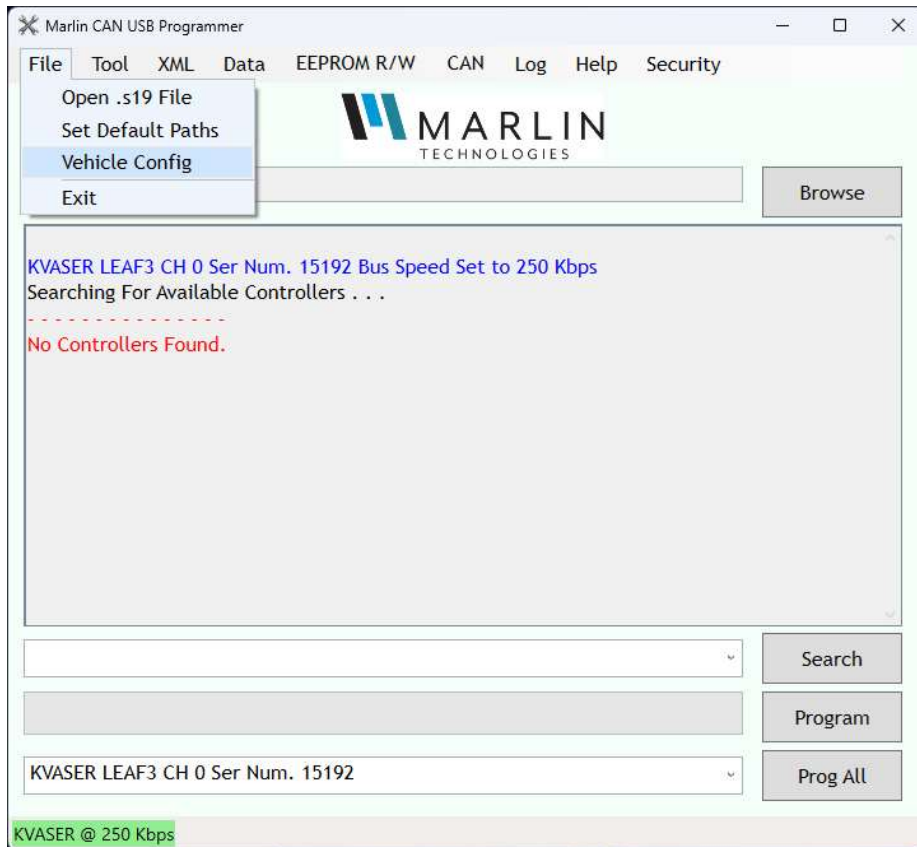

Location of Vehicle Config menu

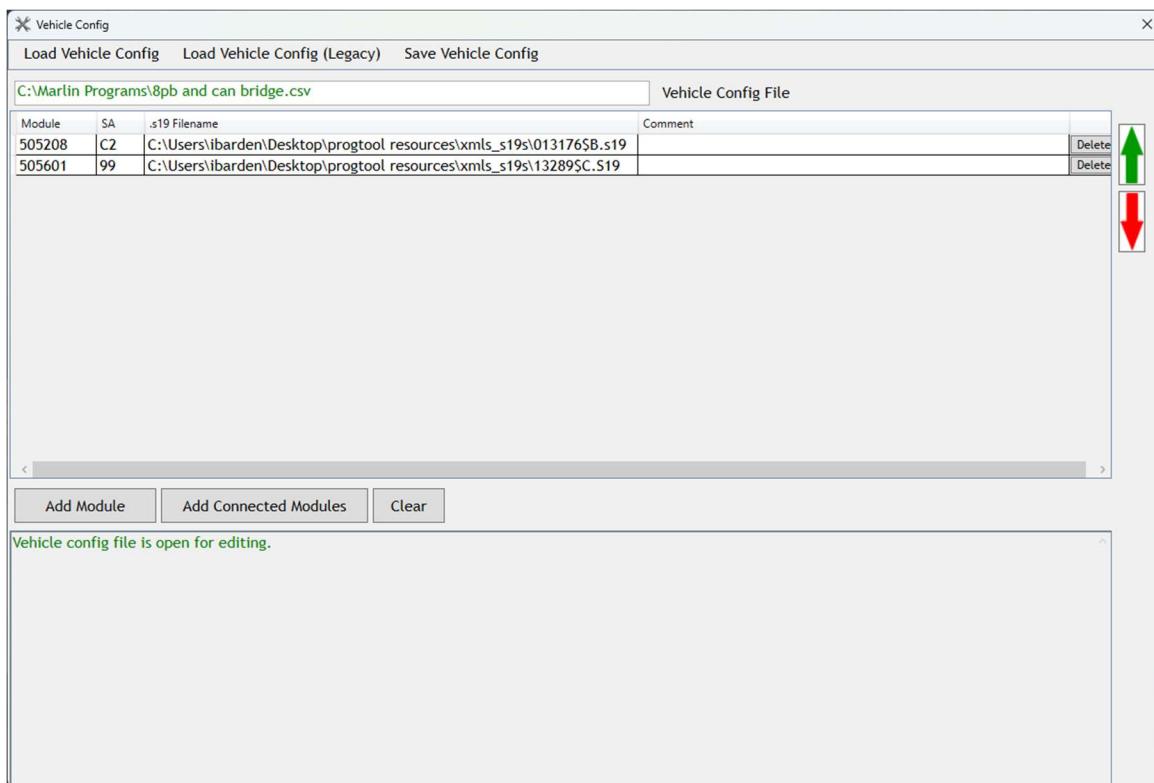

Vehicle Config menu

Pressing "Add Modules" will add an empty item to the table, which can be manually filled in.

Pressing "Add Connected Modules" will populate the table with the module number and source address of all currently connected modules.

Pressing Clear will empty the table.

Within the table, clicking on an item in the .s19 Filename column will open a file browser, to select the desired .s19 file. Clicking on the delete button will delete that row. Use the up and down buttons on the right to move the currently highlighted row.


To load an existing CSV Vehicle Config file, click "Load Vehicle Config" in the toolbar and select the desired file.

To load a deprecated XML Vehicle Config file, click "Load Vehicle Config (Legacy)" in the toolbar and select the desired file.


To save your configured Vehicle Config file, click "Save Vehicle Config"

### Log CAN Bus traffic

Check the “Log” -> “J1939” box to log messages sent over the CAN Bus:

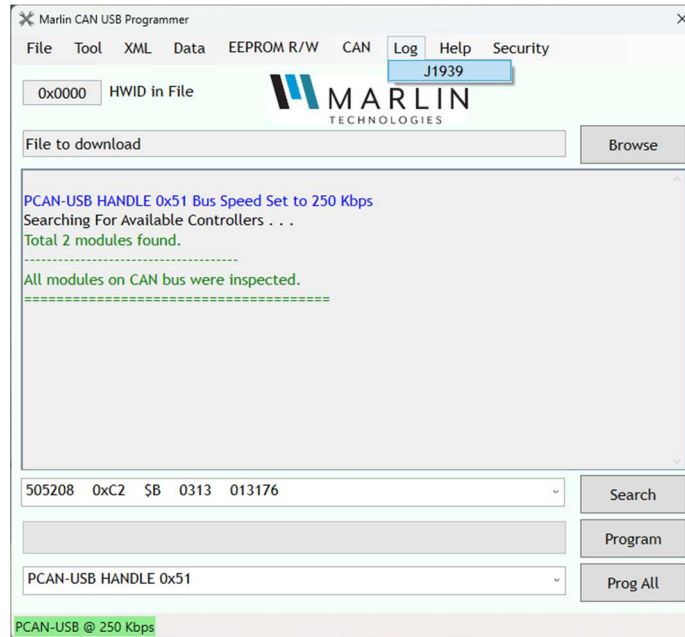


Location of start logging button

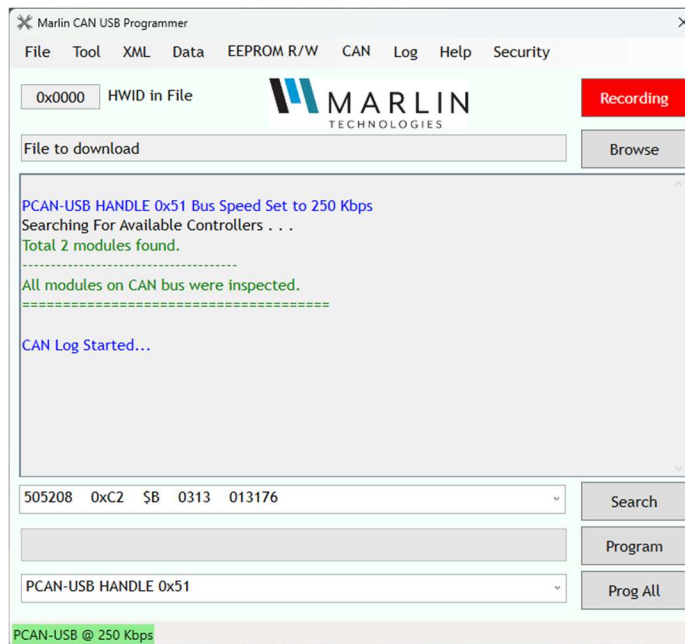

CAN logging in progress

To stop logging, click on the "Recording" button or click on "Log" -> "J1939" again. A new log file (file extension .asc) will be created and saved to 'C:\Marlin Data\myLogs\'.

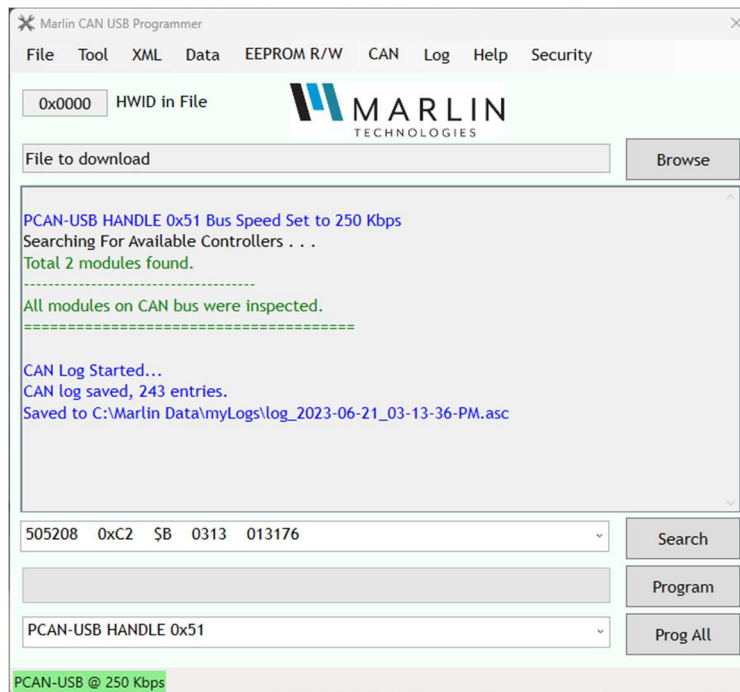

CAN logging is complete


The format of the log file is such that it can be used with Vector Informatik CANalyzer:

```
date Wednesday, June 21, 2023 03:13:16 PM
base hex timestamps absolute
Begin Triggerblock
  0.0000 1 18FED9C2x      Rx d 8  00 00 FF FF FF FF FF FF
 19.2385 1 18EFFF23x      Rx d 8  00 00 00 00 00 00 00 00
148.8164 1 18EFFF24x      Rx d 8  00 00 00 00 00 00 00 00
249.6894 1 18FED9C2x      Rx d 8  00 00 FF FF FF FF FF FF
271.0366 1 18EFFF23x      Rx d 8  00 00 00 00 00 00 00 00
400.6389 1 18EFFF24x      Rx d 8  00 00 00 00 00 00 00 00
499.7320 1 18FED9C2x      Rx d 8  00 00 FF FF FF FF FF FF
522.8514 1 18EFFF23x      Rx d 8  00 00 00 00 00 00 00 00
653.8686 1 18EFFF24x      Rx d 8  00 00 00 00 00 00 00 00
```

Format of CAN log

### Loading EEPROM Data from a controller into an XML File


The user can read and write data to a compatible controller by selecting the "XML" tab:

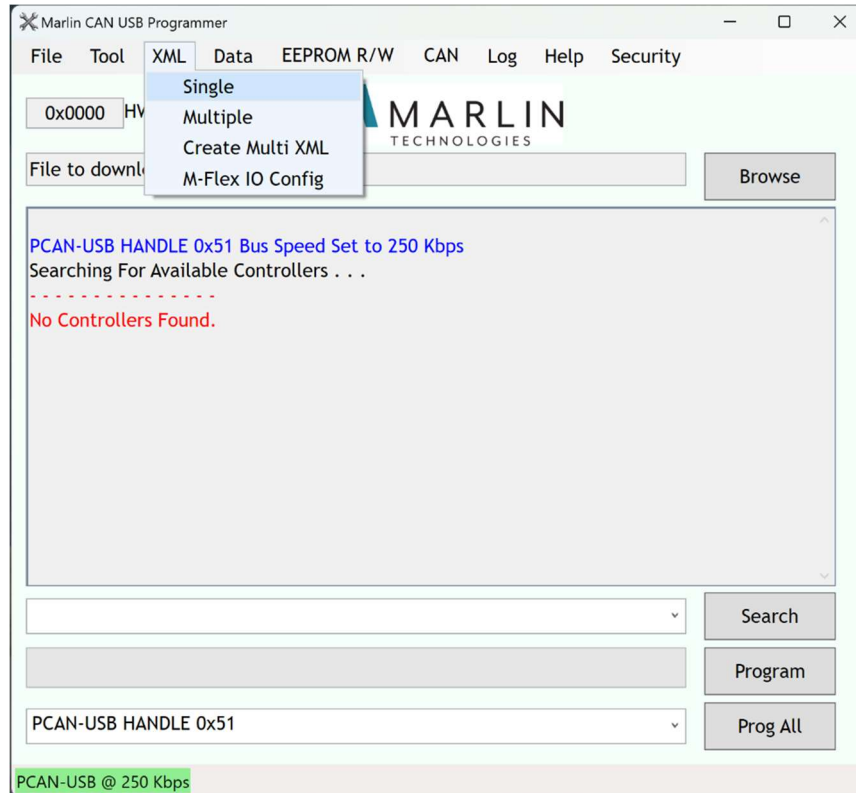

Entering the XML Menu

## Single XML


The application will prompt you to choose an .xml template file. After choosing the file, a new window will appear.

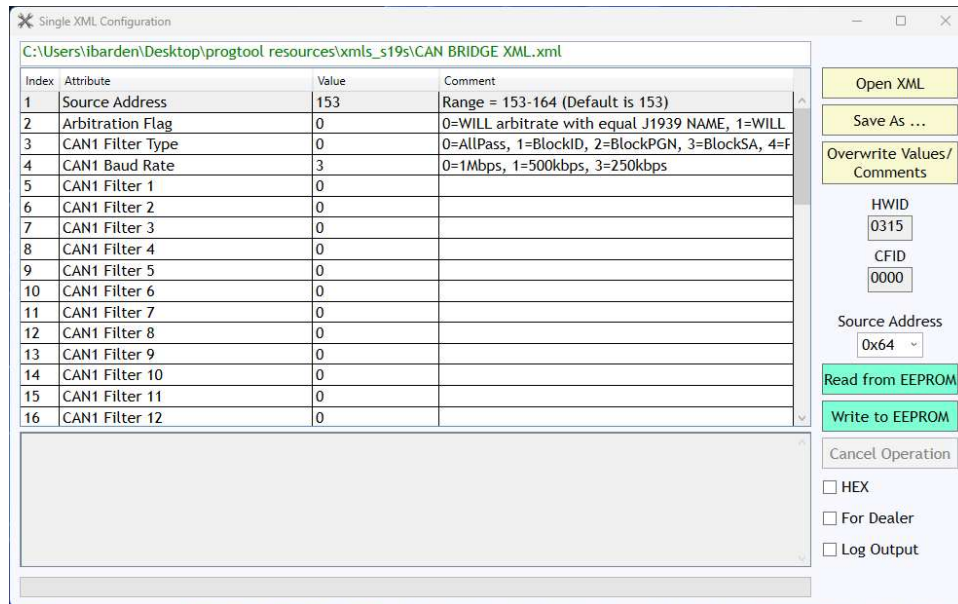

Opened Single XML Menu

From here, the user can

- Open a new XML file with the "Open XML" button.
- Save the currently loaded XML file with "Save As ..."
- Overwrite values/comments using another XML file of the same format with "Overwrite Values/Comments"
- Select which module you want to program with the "Source Address" dropdown
- Read EEPROM values from the selected module with "Read from EEPROM"
- Write EEPROM values to the selected module with "Write to EEPROM"
- Cancel an ongoing R/W operation with "Cancel Operation"
- Change shown values to a hexadecimal representation by checking the "HEX" checkbox
- Create a read only XML file by checking the "For Dealer" and saving the file. The resulting file will read-only.
  - o NOTE: Both the Standard and Dealer versions of the Prog Tool can open dealer XMLs, but the data cannot be changed.
- Output a log file when operations are run by checking the "Log Output" checkbox.

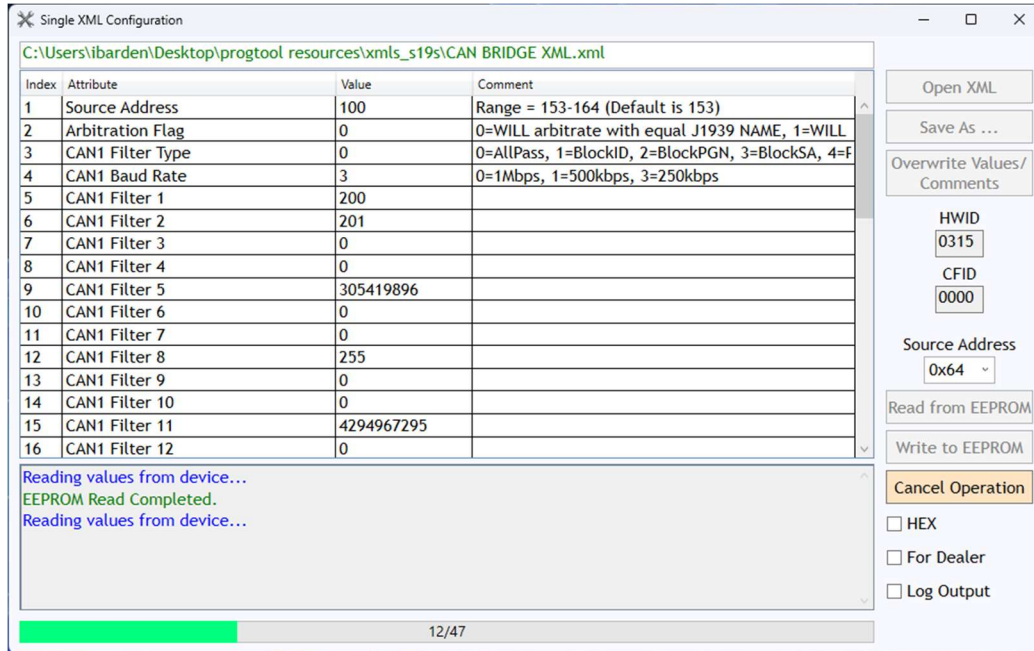


The screenshot shows the 'Single XML Configuration' window with the following table:

Index	Attribute	Value	Comment
1	Source Address	100	Range = 153-164 (Default is 153)
2	Arbitration Flag	0	0=WILL arbitrate with equal J1939 NAME, 1=WILL
3	CAN1 Filter Type	0	0=AllPass, 1=BlockID, 2=BlockPGN, 3=BlockSA, 4=F
4	CAN1 Baud Rate	3	0=1Mbps, 1=500kbps, 3=250kbps
5	CAN1 Filter 1	200	
6	CAN1 Filter 2	201	
7	CAN1 Filter 3	0	
8	CAN1 Filter 4	0	
9	CAN1 Filter 5	305419896	
10	CAN1 Filter 6	0	
11	CAN1 Filter 7	0	
12	CAN1 Filter 8	255	
13	CAN1 Filter 9	0	
14	CAN1 Filter 10	0	
15	CAN1 Filter 11	4294967295	
16	CAN1 Filter 12	0	

The status bar at the bottom shows '12/47'. The right-hand panel contains controls for HWID (0315), CFID (0000), Source Address (0x64), and buttons for 'Read from EEPROM', 'Write to EEPROM', and 'Cancel Operation'. The 'Log Output' checkbox is checked.

EEPROM Read operation in progress

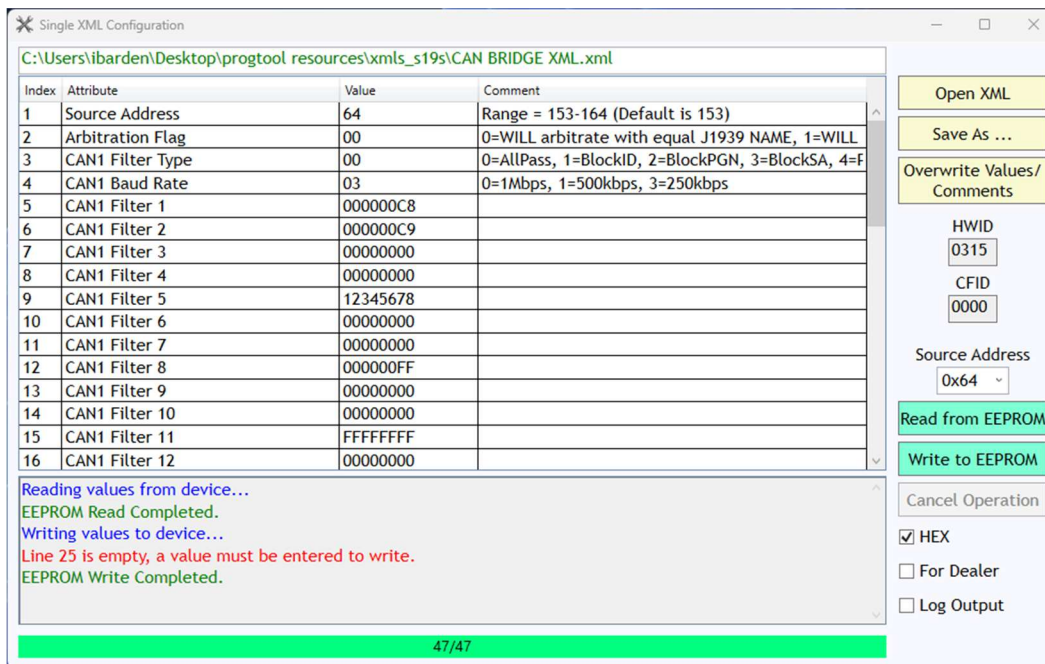


The screenshot shows the 'Single XML Configuration' window with the following table:


Index	Attribute	Value	Comment
1	Source Address	64	Range = 153-164 (Default is 153)
2	Arbitration Flag	00	0=WILL arbitrate with equal J1939 NAME, 1=WILL
3	CAN1 Filter Type	00	0=AllPass, 1=BlockID, 2=BlockPGN, 3=BlockSA, 4=F
4	CAN1 Baud Rate	03	0=1Mbps, 1=500kbps, 3=250kbps
5	CAN1 Filter 1	000000C8	
6	CAN1 Filter 2	000000C9	
7	CAN1 Filter 3	00000000	
8	CAN1 Filter 4	00000000	
9	CAN1 Filter 5	12345678	
10	CAN1 Filter 6	00000000	
11	CAN1 Filter 7	00000000	
12	CAN1 Filter 8	000000FF	
13	CAN1 Filter 9	00000000	
14	CAN1 Filter 10	00000000	
15	CAN1 Filter 11	FFFFFFFF	
16	CAN1 Filter 12	00000000	

The status bar at the bottom shows '47/47'. The right-hand panel contains controls for HWID (0315), CFID (0000), Source Address (0x64), and buttons for 'Read from EEPROM', 'Write to EEPROM', and 'Cancel Operation'. The 'Log Output' checkbox is checked.

Single XML menu in hexadecimal

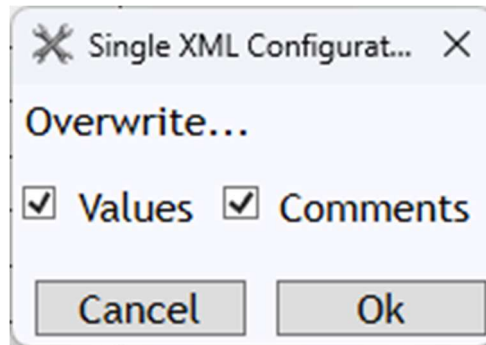

Menu that appears after "Overwrite Values/Comments" is clicked

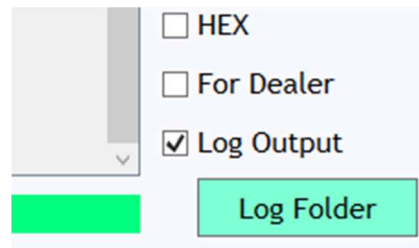

"Log Folder" button appears when Log Output is checked

```
Write Operation Started at: 2025-07-10_03-16-47-PM
Device Information:
Module PN: 505601
Module Rev:
Source Address: 100
HWID: 0315
Software Rev: $D
Software PN: 013289


ERROR: Line 25 is empty, no value written.
INFO: EEPROM Write Complete.

INFO: Lines written 46/47
Write Operation Ended at: 2025-07-10_03-16-50-PM
```

Format of XML R/W Log

## Multiple XML

Similar to the single XML menu, the application will prompt you to choose an .xml template file. After choosing the file, a new table will appear. The user can also save the .xml file by clicking 'Save As' button.

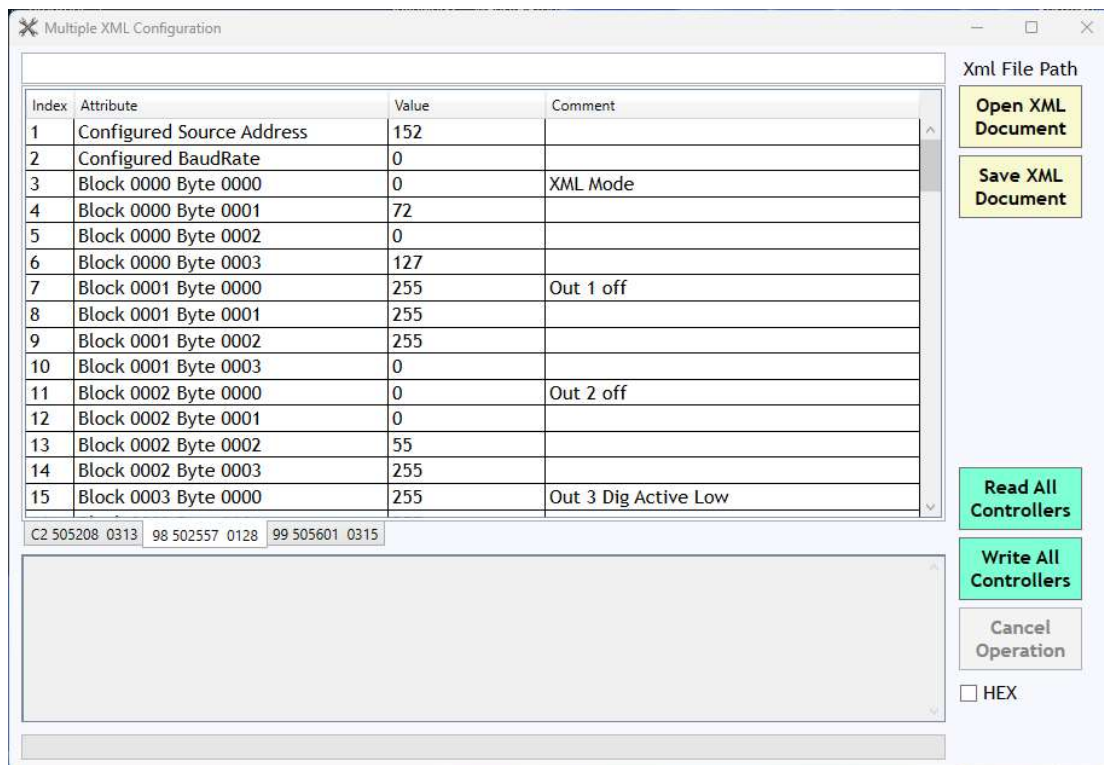

Attributes from template XML files populated into a multi tab XML form.

Now, the user can:


- read attributes from all active controllers by pressing 'Read All Controllers'
- modify the attributes' values and write to the modules by clicking 'Write All Controllers'
- save attributes as a truck XML file by clicking 'Save XML Document'
- open previously saved truck XML files by clicking 'Open XML Document'
- Cancel an ongoing read/write operation

**Note: some tabs may contain no information.**

### Create Multi XML

From this menu, you can create a multiple XML file for use with the 'Multiple XML Configuration' tool.

**Note:** All information (other than 'File Path') needs to be filled in before a file can be saved. The user will be notified of an attempt to save an incomplete file.

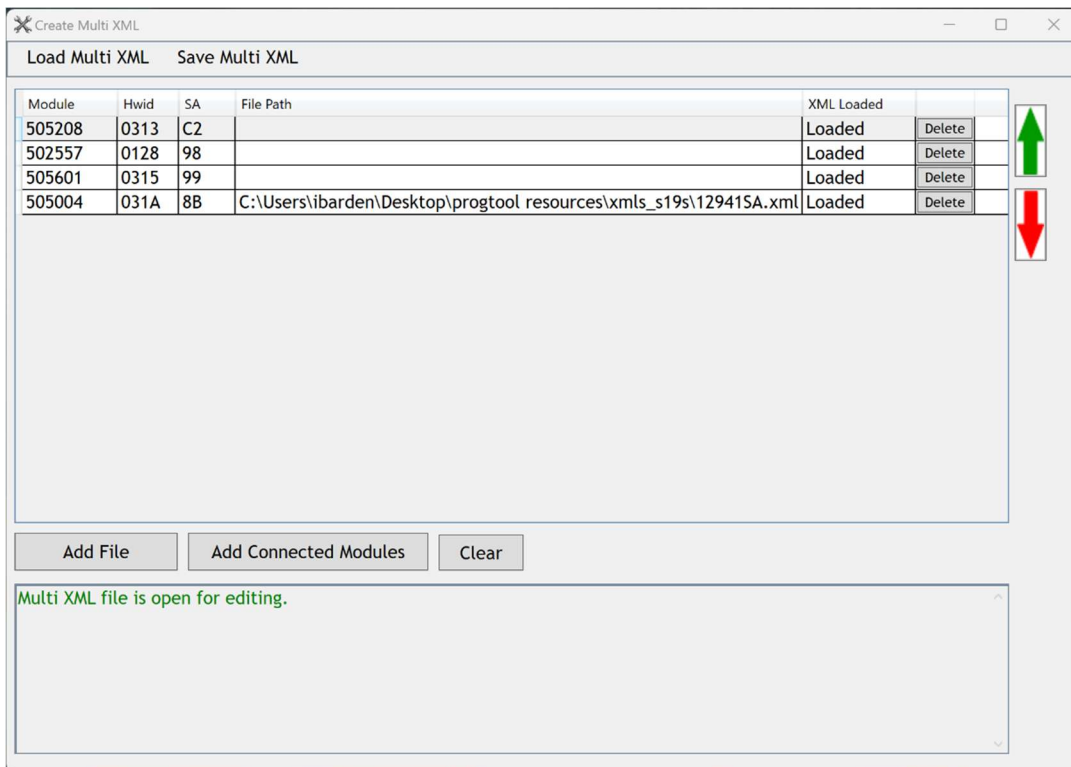

The 'Create Multi XML' Menu

Pressing "Add File" will add an empty item to the table, which can be manually filled in.

Pressing "Add Connected Modules" will clear and populate the table with the module number and source address of all currently connected modules.

Pressing Clear will empty the table.

Within the table, clicking on an item in the File Path column will open a file browser, to select the desired .xml file. Clicking on the delete button will delete that row. Use the up and down buttons on the right to move the currently highlighted row.

To load an existing Multi XML file, click "Load Multi XML" in the toolbar and select the desired file.

To save your configured Multi XML file, click "Save Multi XML"

### Reading EEPROM Data from an ECU into a .txt File

NOTE: Only applies to MTI PN 500812, 500815, and 500841

If your module contains ECU specific data in its EEPROM, you can read its content into a single .txt file which will save to 'C:\Marlin Data\':



Reading EEPROM content into a .txt file


## Accessing controller's EEPROM single cell content

The user can read from or write to a single EEPROM memory cell if the controller's firmware allows it.



Location of EEPROM cell access in main menu


Click on the `'EEPROM R/W'` tab on the main window to open the `'EEPROM R/W'` window. Before reading from or writing to a single memory cell, the user should select the desired module on the main window. The user can then type in the desired EEPROM address and read or write a byte by pressing the corresponding button.

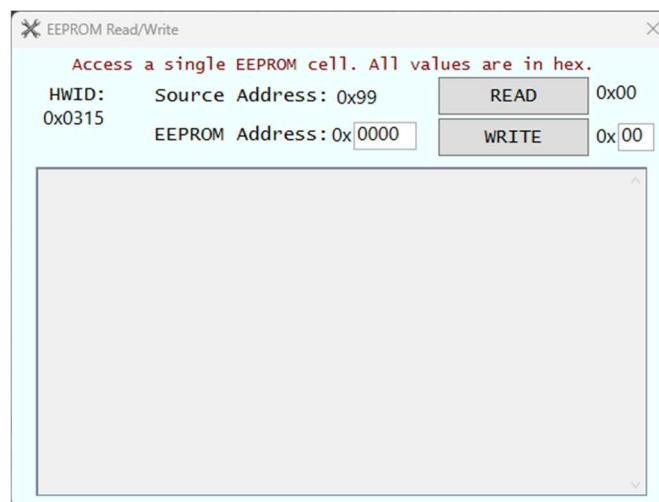

Single EEPROM Read/Write window

## Sending CAN messages to a controller/monitoring CAN traffic


Open the CAN Bus Viewer by clicking on the "CAN" tab.

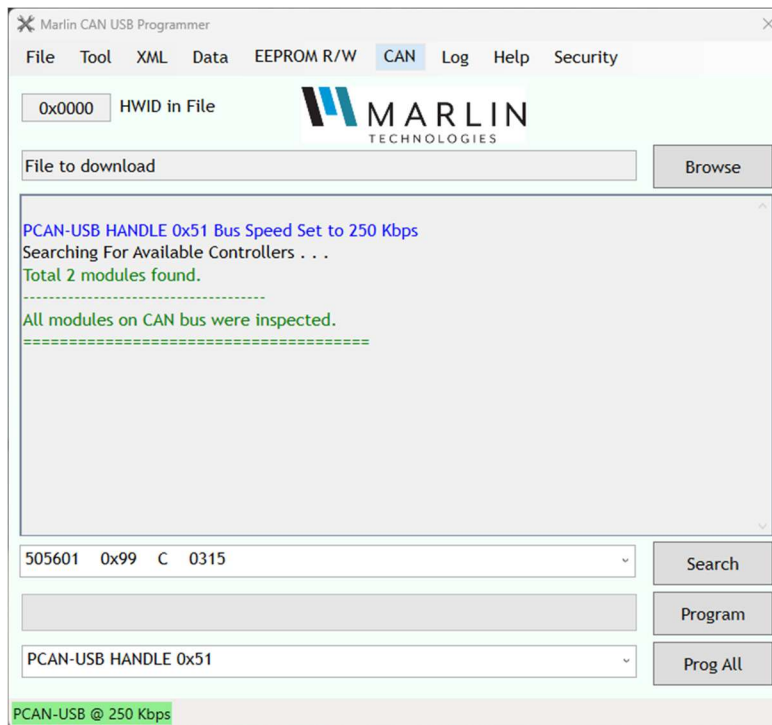


Location of CAN tab on main menu

The "Received CAN Messages" table shows all CAN messages sent by modules on the bus after opening the page.

The Color column can be used to color code received CAN messages. Clicking on the cell will open a color picker, which you can use to select a color.

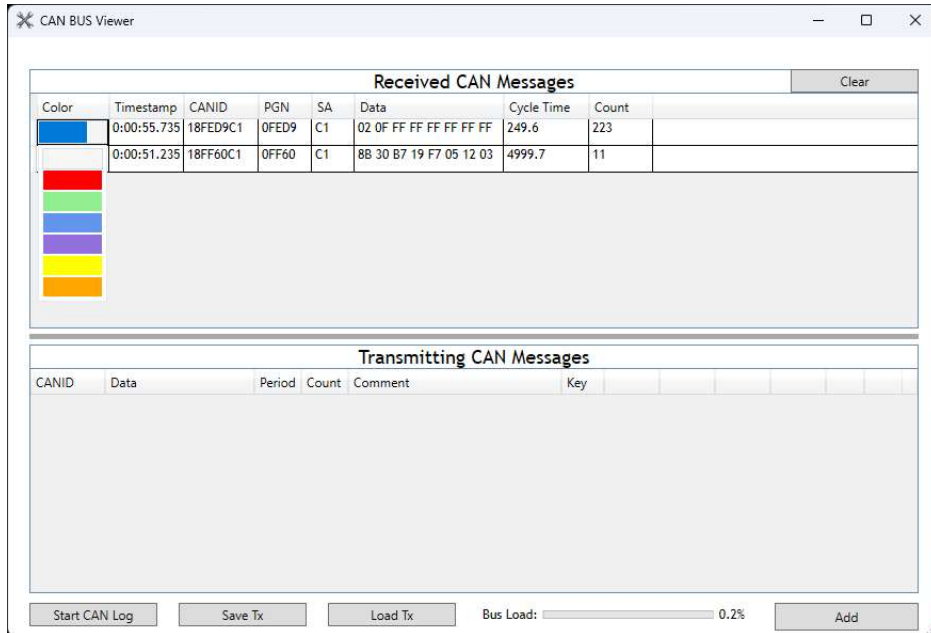

Dropdown to select a color

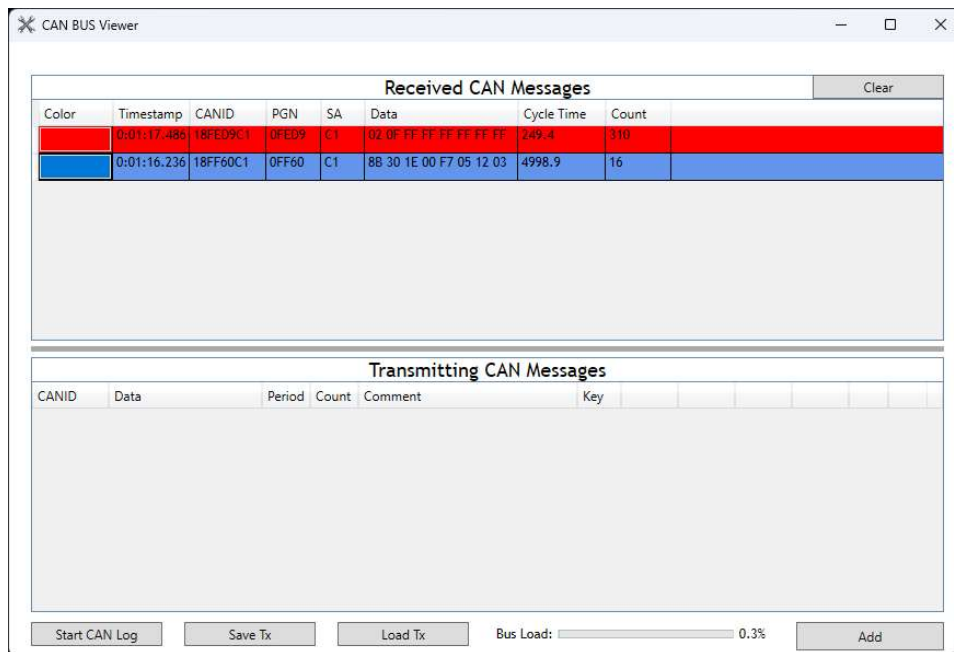


Color selected

The other columns show relevant information on the received CAN messages, including Cycle Time (approximate time elapsed between times this PGN was received), CANID, PGN, Source Address, CAN Data, and Count (the number of times this PGN was received)

The "Transmitting CAN Messages" Table can be used to send messages over the CAN bus.

To add a new message to the "Transmitting CAN Messages" table, click the "Add" button in the bottom right of the window. This will open a window for adding a new CAN message

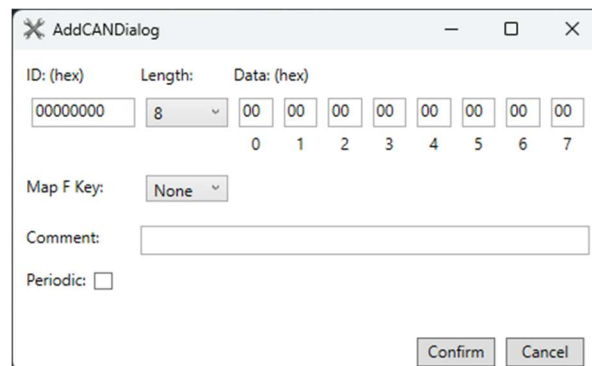

Dialog box to add a new CAN message to transmit

In the window to add a new CAN message, you can set the CAN ID, the length of the data, the data bytes to be sent. An F key or the space key can be set as a hotkey to send this message. A comment can be added to easily identify a particular message. If "Periodic" is checked, you can set a period in milliseconds. This will send this message every time this amount of time has elapsed.

Transmitting CAN Messages											
CANID	Data	Period	Count	Comment	Key						
18FFFFFF	00 11 22 33 44 55 66 77		0	Comment field	Space	Send	Edit	Delete	Copy	Up	Down
18AAAAAA	88 99 AA BB CC DD EE FF	500	0	Comment field 2	F1	Start	Edit	Delete	Copy	Up	Down

Start CAN Log   Save Tx   Load Tx   Bus Load: 0.2%   Add

Transmitting CAN Messages section with example messages

Once a new row has been created, it will fill with the information you just entered. To send this message, or to start sending a periodic message, press the "Send" or "Start" button, or press the mapped key. To stop a periodic message, press the "Stop" button, or press the mapped key. This row can be changed or removed using the "Edit" or "Delete" buttons, respectively.

"Copy" will open a Dialog to create a new CAN Message, populated with the information from the one you're copying. "Up" and "Down" will move that message up or down in the list.

A CAN log can be started or stopped from this menu by pressing the "Start/Stop CAN Log" button in the bottom left corner.


A particular configuration of the "Transmitting CAN Messages" table (file extension .txcfg) can be saved by clicking the "Save Tx" button. These files can then be loaded again by clicking the "Load Tx" button.

### Advanced Settings

Two checkboxes have been added as of 3.0.5, under the "Tool" tab.

**DM13 Stop Broadcast (off by default):** Sends out a J1939 DM13 STOP BROADCAST message before programming. Only supported by some Marlin modules, particularly those that broadcast lots of data over the CAN bus.

**Only Show Marlin Devices (on by default):** Filters searched modules by Marlin Technologies manufacturer code.

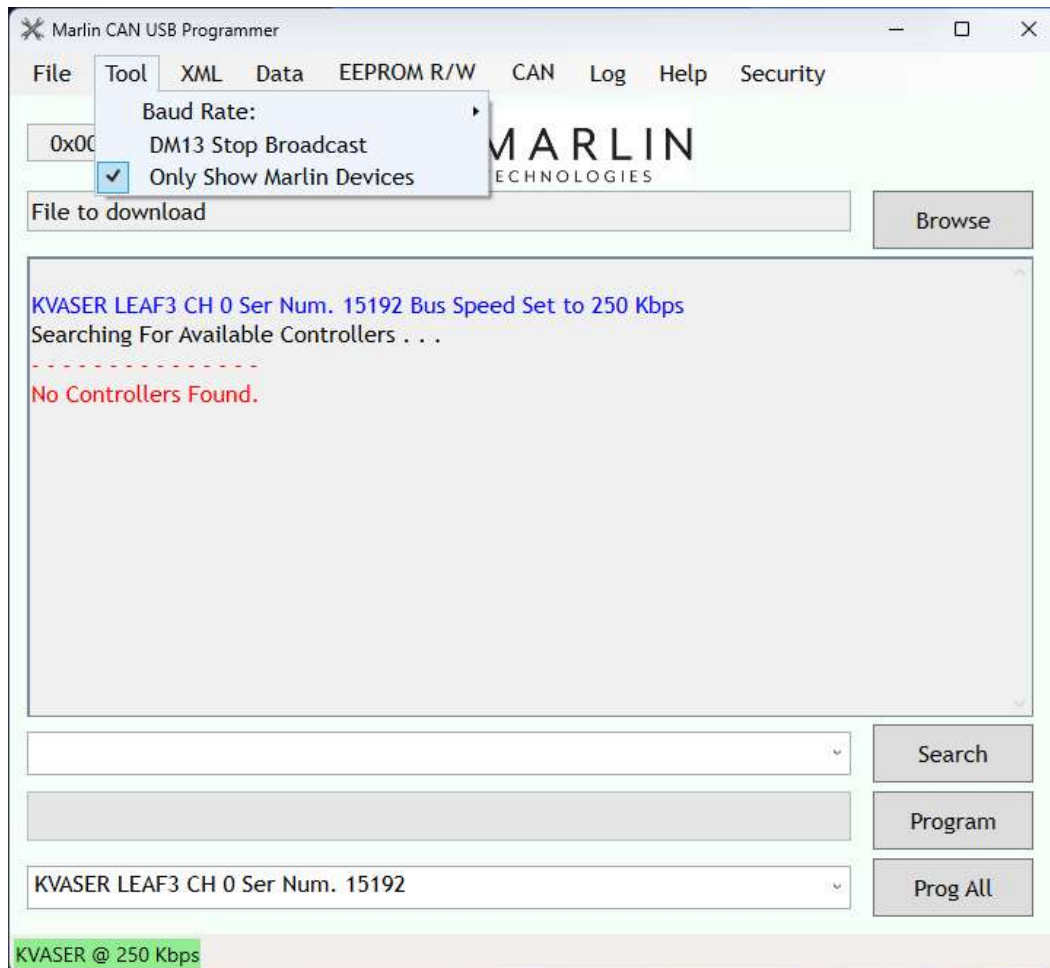

Location of advanced settings checkboxes


### Get information about the Programming Tool

The "Help" tab on the main window contains two options:

"About..." will open a small window that gives some information about the Programming Tool.

"User Guide..." will open this document.


"Programming Resources..." will open a webpage containing information and programming files for M-Flex devices.

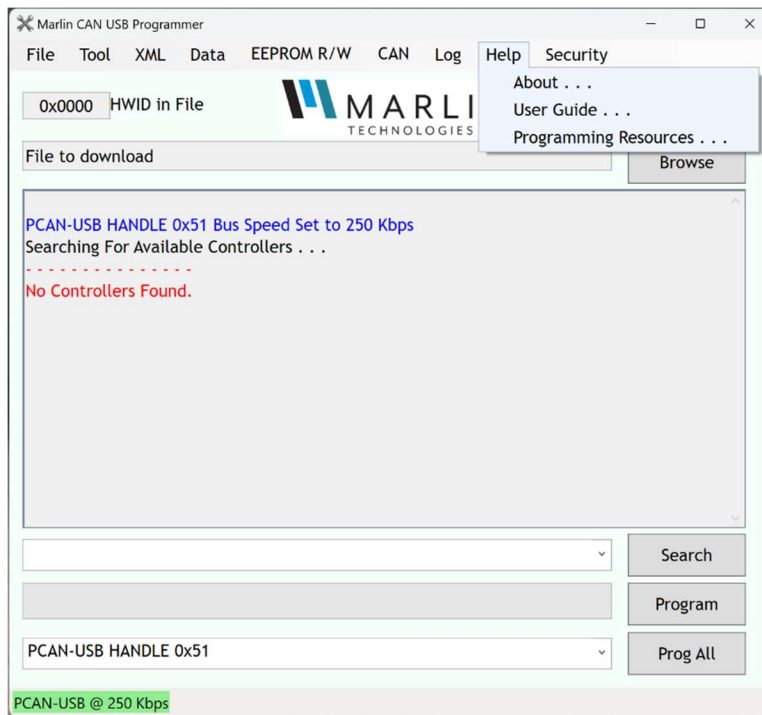

Location of help tab in main menu



About tab

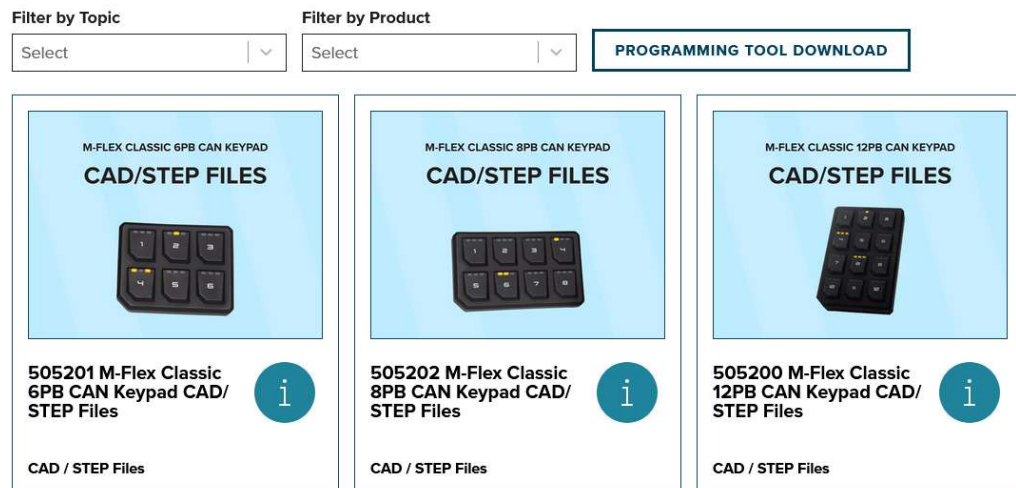

Design Resources page on the Marlin Technologies website.

If you have any additional comments, questions, or concerns, please contact Marlin Technologies Inc customer service by calling 920-485-4463.

## Appendix A: Change Log

### 3.0.0:

- Initial release

### 3.0.1:

- Updated HWConfigs.xml
- Improved how source addresses are selected in the Single XML menu
- Better error handling when creating Marlin directories

### 3.0.2:

- Improved EEPROM queries
- Module to configure can now be selected from the Single XML menu
- Browse button on main window now disabled while searching and programming

### 3.0.3:

- Fixed issue when programming EMC-hardened displays (e.g. 505404)

### 3.0.4:

- Added EEPROM Dump function to Dealer version
- Added 505408 and 505411 to the list of modules that support EEPROM dump
- Periodic messages no longer continue after CAN window is closed
- User is no longer warned about writing a null value XML cell
- Fixed issue with empty Tx messages in CAN log

### 3.0.5:

- Added DM13 Stop Broadcast checkbox
- Added Address Claim Manufacturer Code checkbox
- Hitting the "F" and "S" key no longer crashes CAN menu

### 3.0.6:

- Signed installer

### 3.0.7:

- Modules with HW revisions (i.e. 501214B, 501214C) will now include the letter revision in the search menu
- XML menus now stay aligned when switching between decimal and hex
- Updated Kvaser Drivers
- Added support for Kvaser Leaf Light v3 and Kvaser USBcan Pro

### 3.0.8:

- Added progress bar to XML read write operations
- Added cancel button to XML read write operations
- Added logging feature for single XML
- Made CAN menu's Rx and Tx sections resizable
- Opened s19 files now persist across sessions

### 3.0.9:

- Added "Identify Device" PGN
- Multi Channel CAN adapters (i.e. USBCan Pro) now show all channels
- Dealer XMLs can now be opened in the Standard version, in read-only mode
- Updated HWConfigurations.xml to 1.13

### 3.0.10:

- Updated HWConfigurations.xml to 1.13.
- User Guide now hosted online.
- Added MasterVolt USB-CAN support.
- Added Set Default Paths menu
- "Check Mfg Code" is now "Only Show Marlin Devices"
- Added warning for S19 checksum mismatch
- User can no longer write out-of-range values to EEPROM
- Bus load meter added to CAN menu
- "Copy", "Up", and "Down" buttons added to CAN menu

- Improved general app stability and performance